

Pressostato, Contato Reversível - Série SP20



Características Técnicas


Modelo	Alcance (bar)		Diferencial (bar)		Config. de Fábrica (bar)		Máx. Pressão de Operação (bar)
	Min	Max	Min	Max	OFF	ON	
SP20-02-02	-0.5	2	0.2	0.7	1	0.5	16.5
SP20-03-02	-0.5	3	0.35	1.5	2	1	16.5
SP20-06-02	-0.5	6	0.6	4	3	2	16.5
SP20-08-02	-0.2	7.5	0.7	4	3	2	20
SP20-10-02	1	10	1	3	6	5	16.5
SP20-14-02	2	14	1	4	10	8	20
SP20-16-02	3	16	1	4	10	8	35
SP20-20-02	5	20	2	5	16	13	35
SP20-32-02	8	32	2	6	20	17	35
SP20-42-02	8	42	4	10	30	25	46.5

Funções Elétricas


Corrente Nominal (A) \ Tensão Nominal (V)	250VAC
Carga Máxima	10A
Rotor Bloqueado	72A
Temperatura de Trabalho	-20~110°C

Codificação

SP20	-	<input type="text"/>	-	<input type="text"/>
Modelo		Faixa de Ajuste (Bar)		Rosca
		02	-0,5 ~ 2	02
		03	-0,5 ~ 3	1/4" BSP
		06	-0.5 ~ 6	
		08	-0.2 ~ 8	
		10	1 ~ 10	
		14	2 ~ 14	
		16	3 ~ 16	
		20	5 ~ 20	
		32	8 ~ 32	
		42	8 ~ 42	


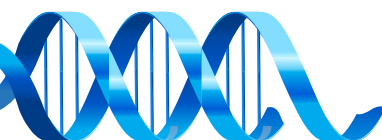


Função de Contato

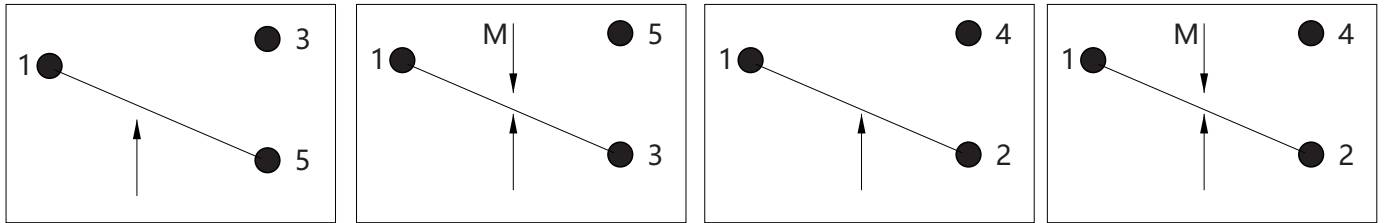

Seta indica a direção em que a pressão aumenta; M significa "reset" manual:

Dimensional

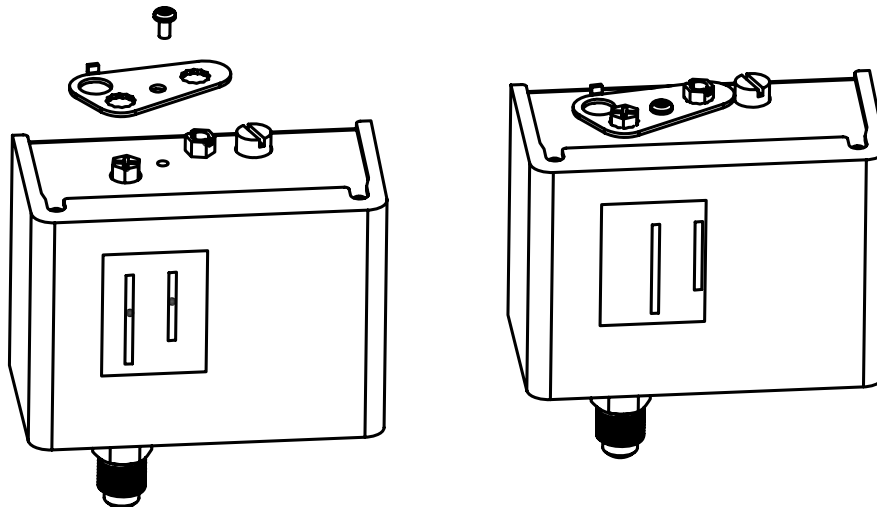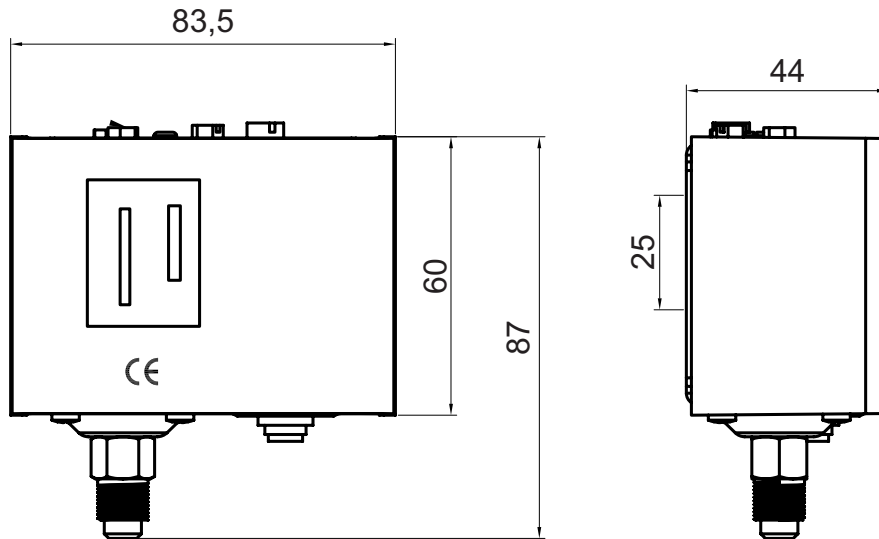

Unidade: mm

